

48volt setup (Two 26v power supplies)

Before turning on the Battery Smacker, you must disconnect both wires to the main relay. Or disconnect one of the + or - end battery post, as non-hertzian energy can fry electronics.

